

AMI Smart Meter Operation and Register Detail

To access **Alternate Mode**, hold a magnet over the reed switch (1:00 position) for more than 3 seconds. "ALT" will be displayed followed by the first Alt Mode display. The meter will scroll through the Alt Mode sequence once, then return to Normal Mode. The alternate mode does not have a scroll feature for the displays.

To access **Test Mode**, hold the test switch button for one second (requires removing the cover). The display does not scroll while the meter is in test mode. Each item remains displayed until a magnet is passed over the reed switch (1:00 position). Each pass of the magnet over the reed switch will advance to the next Test Mode display register. While in Test Mode no billing data is accumulated. To exit Test Mode, press and hold the test switch for more than one second. If the register is left in Test Mode it will time out, and return to Normal Mode in 20 minutes. **Meter must be in test mode for field testing.**



| NORMAL MODE | |
|-------------|---------------|
| ID | DESCRIPTION |
| 88 | Segment Check |
| 03 | kWh Delivered |

| TEST MODE | |
|-----------|---|
| ID | DESCRIPTION |
| | Test Mode Time Remaining in Subinterval |
| 93 | Test Mode kW Total Del |
| 96 | Test Mode Demand Interval Size (Block) |
| 97 | Test Mode kWh Total Del |
| 98 | Test Mode kWh Total Rcvd |

| ALTERNATE MODE | |
|----------------|-------------------------|
| ID | DESCRIPTION |
| 01 | Current Date |
| 02 | Current Time |
| 04 | On Peak kWh Del |
| 06 | Off Peak kWh Del |
| 08 | Max kW Del |
| 09 | On Peak Max kW Del |
| 10 | Off Peak Max kW Del |
| 12 | kVARh total – Lag |
| 71 | Network Status Info. ** |
| 30 | Inst. kW total Del |
| 31 | Inst. PF |
| 33 | Volts A-phase |
| 39 | Date Last Demand Reset |
| 50 | kWh Total Rcvd |
| 55 | Firmware Version |
| 56 | CE Program ID |
| | Service Switch Status |